

# RIGID CORE LUXURY VINYL FLOORING

Palio Core





DURABLE



MAINTENANCE







COMPATIBLE WITH UNDERFLOOR HEATING



1



## CONTENTS

WHAT IS PALIO TRADE BY KARNDEAN?	4
	6
CHOOSING YOUR LAYING PATTERN	8
CHOOSE PALIO CORE WHEN	10
WOOD AT A GLANCE	12
STONE AT A GLANCE	13
WOOD COLLECTION	14
STONE COLLECTION	. 22
SCOTIA AND SKIRTING	26
	28
TECHNICAL SPECIFICATION	29
	30

## WHAT IS PALIO TRADE BY KARNDEAN?

Palio Trade by Karndean luxury vinyl flooring is not like typical vinyl. It doesn't come in rolls or sheets, it comes in robust, pre-cut planks and tiles. Our highly realistic designs look just like the wood and stone materials they're inspired by and offer the following benefits:



QUICK AND EASY TO INSTALL Using our click-locking mechanism.



HIGHLY REALISTIC DESIGNS Designed by Karndean's in-house product team to perfectly replicate real wood and stone.

#### DURABLE

The natural appearance of wood and stone but the durability and resilience of luxury vinyl with a 20 year residential guarantee.



**LOW MAINTENANCE** Clean easily with a sweep and mop. No sanding, varnishing or staining.



WATERPROOF

Won't swell, crack or warp when wet.



**SOFT, WARM AND QUIET UNDERFOOT** No cold tiles, no clicking shoes.



**HYGIENIC** Unlike carpets, our floors don't hold dust, dirt, pollen or other allergens.


**COMPATIBLE WITH UNDERFLOOR HEATING** Up to 27°C.




Palio Core

## INTRODUCING PALIO CORE

Palio Core combines our simple 2G<sup>™</sup> click-locking mechanism with a rigid core construction which provides more stability on uneven subfloors. With its acoustic foam backing, it can reduce noise transfer to rooms below by up to 19dB and there is no need for additional underlay.

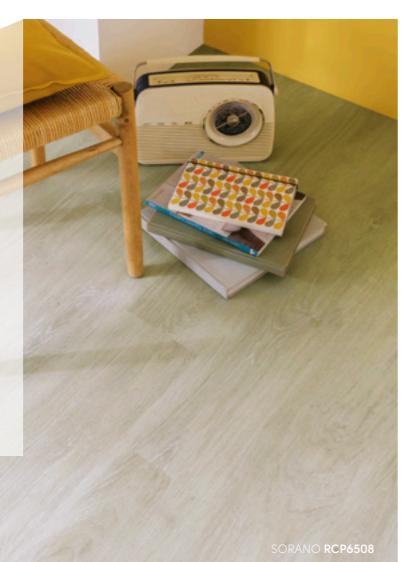



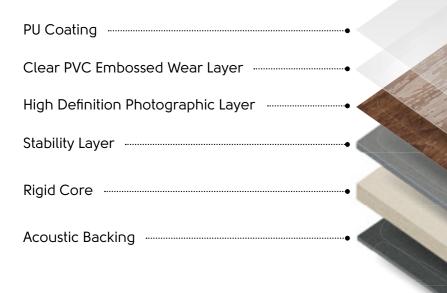

### WHY PALIO CORE?



ø

- QUICK AND EASY TO INSTALL
- PATENTED CLICK-LOCKING MECHANISM



- INSTALLS OVER MOST EXISTING HARD FLOORS
- **REDUCES IMPACT NOISE TRANSFER BY 19dB**



**RIGID CORE CONSTRUCTION** 



### HERRINGBONE

Three of the Palio Core designs are available in both large and small planks. The smaller planks 596mm x 149mm, are laid in a modern herringbone design to create an extra sense of style. Look out for our herringbone icon.







## **CHOOSING YOUR** LAYING PATTERN

It's not just the floor you choose, but the direction you lay it that makes a lasting impression. See some of our suggested laying patterns to create a unique floor.




### WOOD

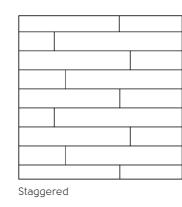

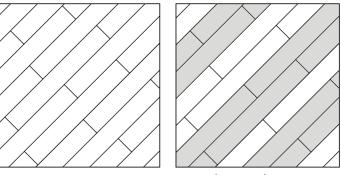



Diagonal

STONE

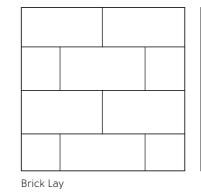

### HERRINGBONE

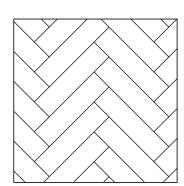

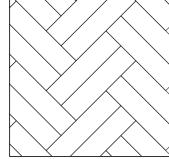


Herringbone



Double herringbone





90 degree herringbone

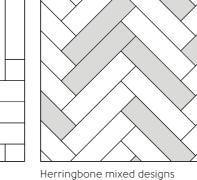

### MIXED PATTERNS


Using a suitable threshold strip between different laying patterns means you can create room to room designs.

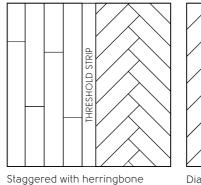

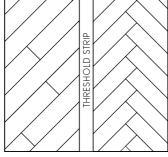



Diagonal with herringbone

5

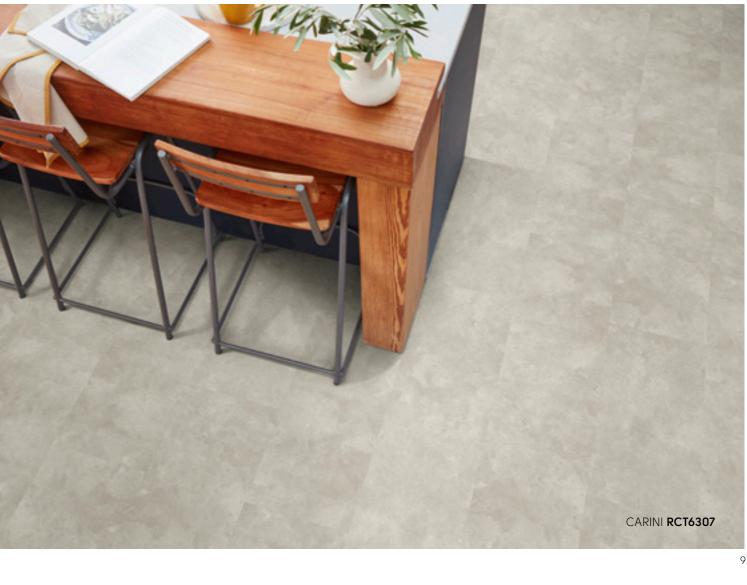

Striped (2-designs)

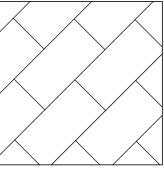

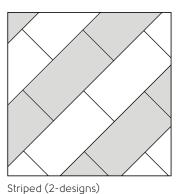

Diagonal

# CHOOSE PALIO CORE WHEN...

You would like a 100% waterproof floor.

You need superior acoustics between floors.

Your floor is still drying out such as new build developments.

You are working on a building with structural limitations or preservation requirements.






You need to install over an existing hard floor.

MODENA SM-RCP6533





### WOOD AT A GLANCE

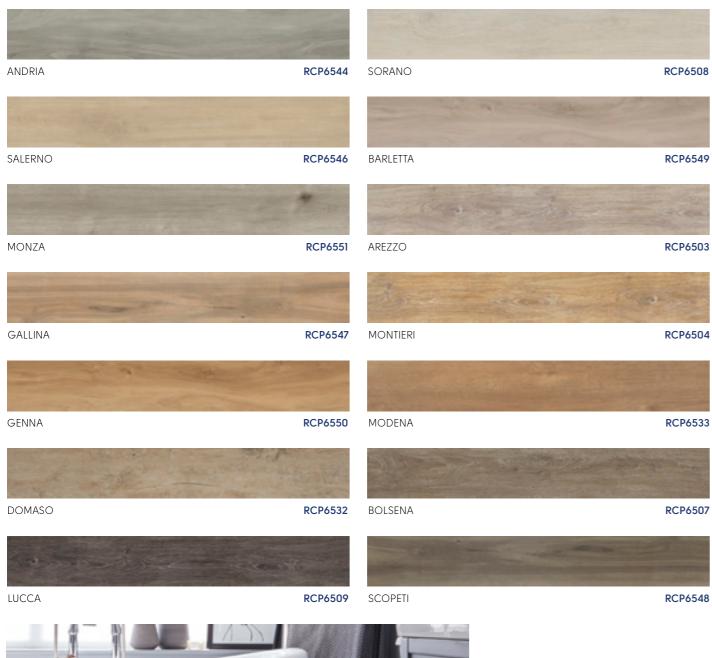


### **WOOD** HERRINGBONE AT A GLANCE





### **STONE** AT A GLANCE

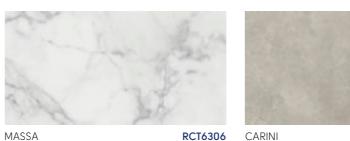









Wear Layer: 0.55mm Box Quantity: 1.842m<sup>2</sup>



BARLETTA RCP6549

12

7

Palio Core

Size: 1220mm x 179mm

Wear Layer: 0.55mm

Box Quantity: 2.184m<sup>2</sup>

Thickness: 6.5mm

Thickness: 6.5mm



RCT6307



RCT6304



PIENZA

RCT6303





Palio floors are naturally warmer than wood or stone but are also compatible with underfloor heating up to 27°C.







MODENA SM-RCP6533



GENNA SM-RCP6550



MONZA SM-RCP6551



MONZA SM-RCP6551



## **WOOD** HERRINGBONE











Click-locking planks or tiles together enables a quick and easy installation.





ANDRIA RCP6544

SORANO RCP6508









16

SALERNO RCP6546

9

MONZA RCP6551





AREZZO RCP6503







GALLINA RCP6547



10



GENNA RCP6550

MODENA RCP6533




MONTIERI RCP6504





DOMASO RCP6532









BOLSENA RCP6507



LUCCA RCP6509



SCOPETI RCP6548

**STONE** 307mm x 600mm







CATANIA RCT6308



CETONA RCT6304





**STONE** 307mm x 600mm



CARINI RCT6307








PIENZA RCT6303

## 100% WATERPROOF SCOTIA AND SKIRTING

The light weight, flexible colour matched scotia helps finish the installation and hides your expansion gap.

AREZZO	SCO-RCP6503	-
MONTIERI	SCO-RCP6504	- and -
BOLSENA	SCO-RCP6507	
SORANO	SCO-RCP6508	
LUCCA	SCO-RCP6509	
DOMASO	SCO-RCP6532	
MODENA	SCO-RCP6533	
ANDRIA	SCO-RCP6544	
SALERNO	SCO-RCP6546	Mar and Market
GALLINA	SCO-RCP6547	
SCOPETI	SCO-RCP6548	
BARLETTA	SCO-RCP6549	
GENNA	SCO-RCP6550	1 - 1 - 1 - 1
MONZA	SCO-RCP6551	
PIENZA	SCO-RCT6303	
CETONA	SCO-RCT6304	
MASSA	SCO-RCT6306	a se
CARINI	SCO-RCT6307	Mar Hard
CATANIA	SCO-RCT6308	Pala
WHITE	SCO-WHITE	

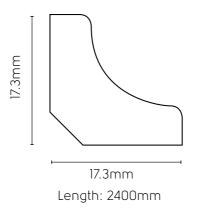

Alternatively finish with a new paintable white skirting board to hide the expansion gap between the wall and the floor.

WHITE	SK100-WH	ITE	
Length:	2400mm	Ioomm	



## SCOTIA AND SKIRTING INSTALLATION GUIDELINES

For full instructions and guidance on cutting scotia and skirting visit **palioflooring.com** 

#### Joining straight lengths


Using a mitre block, cut the left hand piece at a 45 degree angle and for the right hand piece use the same 45 degree angle as the left hand piece and make the cut.

#### Scotia

#### Internal corners

Using a mitre block, cut the left hand piece at 45 degrees sawing bottom left to top right. Cut the right hand piece at 45 degrees sawing bottom right to top left.


#### Scotia

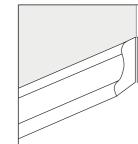

### External corners


Using a mitre block, cut the left hand piece at 45 degrees sawing bottom right to top left. For the right hand piece, cut at 45 degrees sawing bottom left to top right.

### Scotia

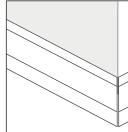


#### Scotia


Apply cartridge/tube adhesive to the back of your scotia and afix to the wall/skirting.

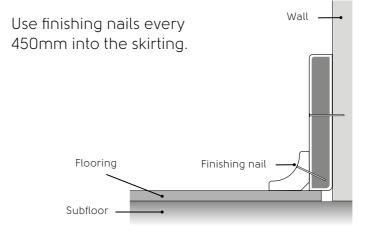




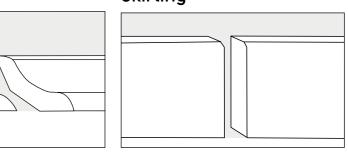


### Skirting

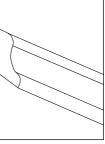

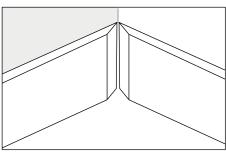

#### Skirting



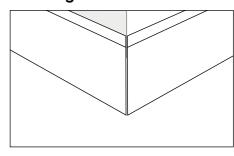

### Skirting

Apply cartridge/tube adhesive to the back of the skirting and firmly press against the wall until cured. If required, use 18 gauge fine wire nails every 450mm through the skirting into the wall.

